LED Light for Machine Vision and Industrial Inspection

KT-MFU Series **Operation Guide**

Thank you for purchasing a CCS product. To ensure proper use of the product, please read this instruction guide before use and keep it for your future reference.

- These products are designed for use with the Spot Lights HLV3-C series.
- Mount the product on the Light Unit to enable back-lighting
- · Do not mount the product on the Light Unit of any other series. Confirm applicable models and use the product correctly.

Important Information for Equipment Safety - Read Before Use -

These products have been designed with full consideration of safety. However, incorrect usage of the products may result in fire, electric shock, or other serious damages. Please ensure to follow the conditions below.

The following symbols are used in this instruction guide to indicate and classify the relative importance of warnings and cautions.

•	Indicates that incorrect		•	Indicates that incorrect	
	usage may result in serious	Δ			
	injury or death.			or property damage.	

The following symbols in the Instruction Guide indicate and classify the precautions.



🕂 Warning			
Do not disassemble or modify the Backlight Unit. Doing so may result in fire or electric shock.	MSASSEMBLY PROHIBITED	Light from the Backlight Unit mounted on the Light Unit may cause corneal or retinal abnormalities if you look directly at the light. To prevent harmful light exposure, never look directly at the irradiation from the Backlight Unit.	MANDATORY
Make sure that the Backlight Unit is free of moisture or any liquid. Exposure to water may result in fire, electric shock.	ON NOT SUBJECT TO MOISTURE	The Backlight Unit becomes very hot in use. Do not touch the Backlight Unit while the Light Unit is turned on or immediately after it is turned off. Doing so may cause burn. Provide cooling with a fan or other ventilation if the Backlight Unit is used in a closed space.	MANDATORY
		Disconnect the Light Unit from the Control Unit before mounting or removing the Backlight Unit. Failure to do so may result in fire or electric shock.	MANDATORY

Caution Do not drop the Backlight Unit or Mount the Backlight Unit onto the subject it to impact. Doing so may applicable model. Mounting the cause damage to the Backlight Backlight Unit onto another model Unit. is not included in the warranty.

Do not use the Light Unit in the following situations.


- Under conditions or in an environment not described in this instruction guide.
- In nuclear energy control systems, railroad systems, aviation systems, vehicles, combustion equipment, medical equipment, amusement machines, or safety equipment. • In applications involving serious risk to life or property, particularly applications demanding a high level of safety.

Please install the Light Unit to locations with following conditions. Incorrect installation location may cause Light Unit failure.

- In a flat and stable location with Places free from any water, oil, liquid, minimal vibration. chemical. or steam.
- temperature changes.
- Well-ventilated places with minimal dust. Places free from corrosive or combustible gas.
- Places that are not subject to sudden Places away from water faucets, boilers, humidifiers, air conditioners, heaters, or stoves.

Confirming Product Information

The following label is attached to the Backlight Unit. The name label specifies the model name and serial number. Be sure to check the contents before using the Backlight Unit and handle the label with care. If the label is missing or damaged and the contents cannot be checked, please contact CCS Inc.

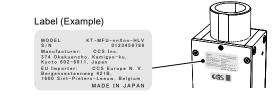

Installation 3

Make sure that the Light Unit is disconnected from the Control Unit ▲ Warning before installation.

Thin and delicate glasses are used for the Backlight Unit. Do not drop it A Caution or subject it to impact. Doing so may cause damage to the Backlight Unit.

Applicable Light Units

- HLV3-22-1C series, HLV3-22-2C series, HLV3-22-4C series, HLV-22IR series, and other Spot Lights provided with a light emitting tip of the same geometry
- · Spot Lights individually specified by CCS

Attaching the Aperture

Three types of apertures with different aperture hole diameters come with the Backlight Unit. The amount and distribution of light differ depending on the aperture hole diameter. Select the optimum aperture for your application and attach it to the Light Unit.

Insert the light emitting tip of the Light Unit all the way into the aperture.

perture (accessory)

Aperture hole diameter	Light amount	Light distribution	-
Small	Small	Narrow	
Large	Large	Wide	




Diffusion plate

Note:

- When shipped, the diffusion plate is built into the aperture (Ø1). Be sure to transfer the diffusion plate when switching to another aperture.
- Insert the diffusion plate into the aperture with the glossy, smooth side facing the light source.
- When you attach the aperture to the Light Unit, be careful not to drop the diffusion plate from the aperture.

Installing the Light Unit

After removing the barrel from the Backlight Unit, insert the Light Unit attached with the aperture all the way into the barrel, and then insert the barrel into the Backlight Unit. For information on the insertion depth, refer to 6. Dimensions.

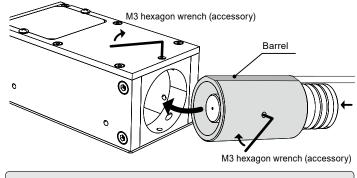


- · Do not insert the barrel all the way into the Backlight Unit. The barrel may come into contact with the lens inside the Backlight ▲ Caution Unit and cause a malfunction. Do not reverse the position of the barrel. The thicker pipe wall
 - must face the Light Unit.

3 Installation (Continued)

Adjusting the Light Source Position

Loosen the barrel fixing screw to adjust the position of the barrel. Tighten the barrel fixing screw with the flat surface of the barrel facing upward.

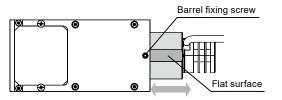

4 Operating Instructions

Make sure that the Control Unit for the LED Light is turned OFF.

• Connect the light cable of the Light Unit to the Control Unit.

For information on the available Control Units, refer to the instruction guide of the Light Unit.

Insert the plug all the way into the connector.

For information on applicable Control Units and cables, refer to the product catalogs or the CCS web pages.

2 Turn ON the Control Unit to turn ON the light.


Read the instruction guide of the Control Unit before use.

3 Adjust light range and radiant quantity to optimize images.



O

For capturing the image using the Backlight Unit, it is necessary to use a goniometer stage and others to precisely locate the equipment. For detailed information on imaging procedures, refer to *MFU series Operating Procedures* on the CCS web page.

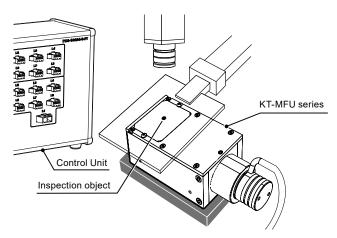

- Conceptual Diagram -

Precautions

Dust, dirt, or fingerprints on the glass portions of the Backlight Unit may affect the captured image. In that case, clean the Backlight Unit as follows:

- Remove dust and dirt by blowing it off with air. Do not touch the Backlight Unit with your hand.
- Use a soft, finely woven cloth to wipe away any marks, such as fingerprints.
- Use a soft, finely woven cloth soaked with diluted neutral detergent to remove any heavy dirt.

Handle the Backlight Unit with care during daily use. Make sure no dust, dirt, or fingerprints adhere to the Backlight Unit.

5 Main Specifications

Common Specifications

Operating environment (indoors only)	Temperature: 0 to 40°C, Humidity: 20 to 85%RH (with no condensation)
Storage environment	Temperature: -20 to 60°C, Humidity: 20 to 85%RH (with no condensation)
Case material	Aluminum alloy, steel plate, resin
Accessories	Aperture (Ø0.5) x 1 pc., aperture (Ø1)* x 1 pc., aperture (Ø2) x 1 pc., set screws (M3 x 3 mm, black) x 4 pcs., M3 hexagon wrench x 1 pc.


* A diffusion plate is built-in at the time of factory shipment.

Specifications by Model


Model name	Weight
KT-MFU-34X30-HLV	Approx. 0.2 kg
KT-MFU-54X40-HLV	Approx. 0.4 kg

6 **Dimensions (mm)**

KT-MFU-34X30-HLV

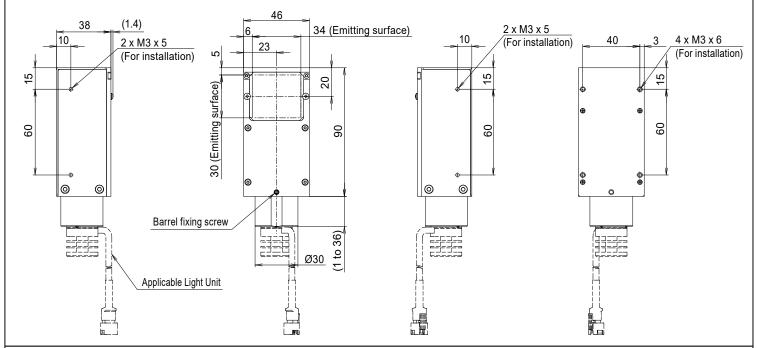

KT-MFU-54X40-HLV

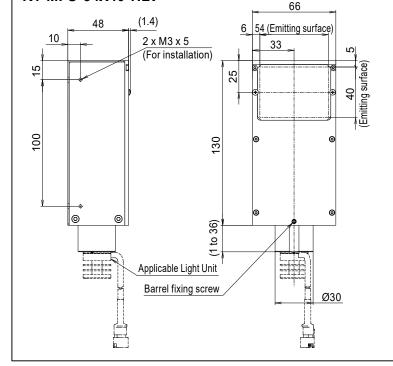

Warranty Information

EXCEPT FOR THE EXPRESS WARRANTIES STATED IN THIS DOCUMENT, CCS MAKES NO ADDITIONAL WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, AS TO ANY MATTER WHATSOEVER. IN PARTICULAR, ANY AND ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE ARE EXPRESSIVE EXCLUDED. EXCEPT AS EXPRESSLY SET FORTH HEREIN, CCS MAKES NO WARRANTIES WITH RESPECT TO THE PRODUCTS.

WARRANTY PERIOD: TWO YEARS, STARTING FROM CCS Inc. SHIPPING DATE.

CCS Inc. WILL REPAIR OR REPLACE THE PRODUCT FREE OF CHARGE IF IT SHOULD FAIL TO FUNCTION WITHIN THE SPECIFIED WARRANTY PERIOD. IF EITHER OF THESE CONDITIONS OCCURS, PLEASE TAKE THE PRODUCT TO YOUR CCS SALES REPRESENTATIVE.

WARRANTY TERMS

1 CCS Inc. WILL REPAIR OR REPLACE THE PRODUCT FREE OF CHARGE IF IT SHOULD FAIL TO FUNCTION UNDER USE ON OUR SPECIFIED CONDITION IN ACCORDANCE WITH THE INSTRUCTION GUIDE AND OTHER WRITTEN CAUTIONS DURING THE INDICATED WARRANTY PERIOD OF TWO YEARS.

- CCS Inc. WILL CHARGE A REPAIR FEE UNDER THE FOLLOWING CONDITIONS:
 IF THE PRODUCT HAS BEEN SUBJECTED TO MISUSE, UNAUTHORIZED REPAIRS, OR MODIFICATION FROM ITS ORIGINAL DESIGN.
 IF THE PRODUCT HAS BEEN DAMAGED FROM IMPACTS DUE TO INAPPROPRIATE HANDLING.
 - IF THE PROJUCT HAS BEEN DAMAGED FROM IMPACTS DUE TO INAPPROPRIATE HANDLING.
 IF DAMAGE TO THE PRODUCT RESULTS FROM EXTERNAL CAUSES INCLUDING ACCIDENTS, FIRE, POLLUTION, RIOTS, COMMUNICATION FAILURES, EARTHQUAKES, THUNDERSTORMS, WIND AND FLOOD DAMAGE, OR ANY OTHER ACT OF PROVIDENCE, OR FROM ANY EXTRAORDINARY CONDITIONS SUCH AS ELECTRICAL SURGES, WATER LEAKAGE, CONDENSATION, OR THE USE OF CHEMICALS.
 IF THE DAMAGE RESULTS FROM CONDECTION TO ANY LIGHT UNIT OR TO ANY EQUIPMENT WHICH CCS Inc. DOES NOT MANUFACTURE OR DOES NOT SPECIFY FOR USE.
- 3 CCS ASSUMES NO LIABILITY FOR ANY PURCHASER'S SECONDARY DAMAGE (DAMAGE OF EQUIPMENT, LOSS OF OPPORTUNITIES, LOSS OF PROFITS, ETC.) OR ANY OTHER DAMAGE RESULTING FROM A FAILURE OF OUR PROD RODUCT

THIS WARRANTY INFORMATION PROVIDES THE SCOPE OF CCS'S PRODUCT WARRANTY WITHIN THE SPECIFIED PERIOD, AND DOES NOT INDICATE OR IMPLY ANY FURTHER GUARANTEE BEYOND THE WARRANTY TERMS.

CONTACT CCS FOR INQUIRIES OR INFORMATION ON REPAIRS TO THE PRODUCT AFTER THE EXPIRATION OF THE WARRANTY.

4 x M3 x 6 10 2 x M3 x 5 60 3 (For installation) (For installation) 15 15 100 8 0 0 ||© Ø ци Д

- · Contents of this Instruction Guide may be changed without prior notice
- Illustrations used in this Instruction Guide may differ from actual products.
 CCS maintains the copyright on this Instruction Guide. Unauthorized transfer or reproduction is strictly prohibited



http://www.ccs-grp.com/