



Vision Light Tech

creating optical solutions

Installation Instructions & User's Manual



About The Solstice Solo LED Light:

1 Solstice Solo



LIGHT

Qty: 1

2 Pigtail



WIRING

Qty: 1

3 Set Bolt [2mm]



PART (B1)

Qty: 2

4 Allen Key [2mm]



PART (A1)

Qty: 1

5 Omni Link



PART (O1)

Qty: 1

6 Solo Mount w/ Nylock Nuts



PART (M1)

Qty: 1

FEATURES

1. Highest Light Output Per Cubic Inch on the Market
2. Less than 1 Amp Power Consumption
3. Omni-Link Interlocking System

SOLSTICE SOLO SERIES SPECIFICATIONS

1. Warranty	: Extended
2. Amp Draw	: 0.83A @ 12V DC
3. Input Voltage	: 9-32V DC
4. Beam Patterns	: 10°, 30°, 30°/65°, 60°
5. LED Lifespan	: 50,000 Hours

PREPARATION

1. We recommend completely reading instructions before installing.
2. Consult your local state regulatory agency regarding the use of LED lighting.
3. The placement of LED lighting should not restrict airflow to the radiator, or block head lamps, turn signals, or parking lights.


**WARNING: Bolts, Nuts, and Washers are Stainless Steel.
DO NOT USE Pneumatic or Electric Tools to Tighten and
Loosen. The Hardware Will Permanently Lock Together.**

MOUNTING INSTALLATION INSTRUCTION

1. First, attach Solo Mount to Light using provided Set Bolt(B1) and Allen Key(A1).
2. Next, place the light on the location where it will be mounted.
3. Determine where the Solo Mount bolt will be placed, and mark where the bolt location will be.
4. Drill a hole for the Solo Mount bolt.
5. Place the light over the hole, and then slide the bolt through the drilled hole.
6. Slide the Nylock Nut on the opposite side of the drilled hole, and fasten until properly secure.

MOUNTING KEY

1. Solo Mount
2. Bolt
3. Mounting Surface
4. Nylock Nut 5mm

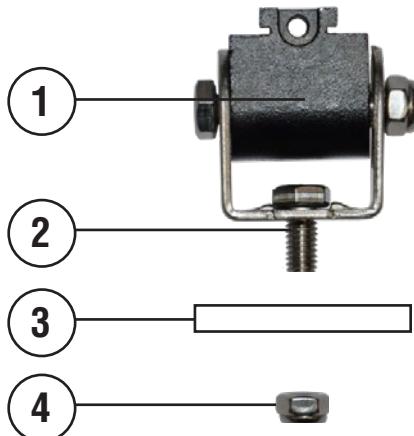

OMNI-LINK INSTRUCTIONS (OPTIONAL)

1. Using the provided Omni Link (O1), slide the link into desired top or side notch of the light.
2. Set in place using provided Set Bolt (B1) and Allen Key (A1).
3. Repeat using second light to link both lights together.



TIP: For complete application guide see website




Vision Light Tech

creating optical solutions

WIRING INSTALLATION INSTRUCTION

1. Supplied with the Solstice Solo is a 3" Pigtail.
2. Connect the positive (red) Pigtail wire to the positive wire of your power source. Repeat this step for the negative Pigtail wire (black) as well.
3. Now that power is connected to the pigtail it is ready to plug into the LED light for use.

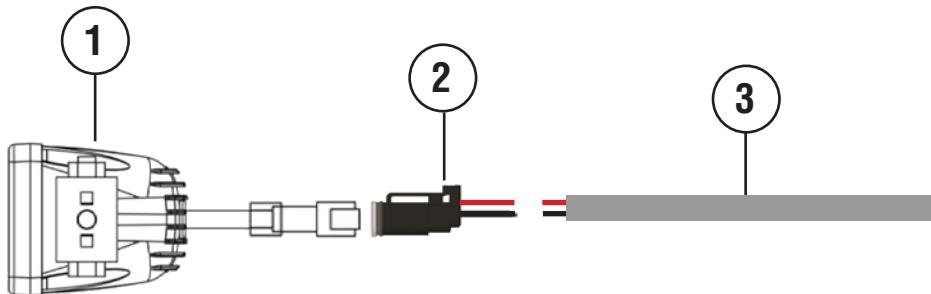

COMPONENTS KEY

1. LED Light
2. Pigtail
3. Wire to Power Source

MAINTENANCE

1. All models have been designed for maintenance free use. In the case an LED lamp or other part replacement is needed please contact your authorized service center.